



Gravity Effluent Filter Specifications & Installation Instructions



Please use this reference to select the appropriate filter.

FEATURES	PL-122	PL-525	PL-625
Filtration	1/16"	1/16"	1/32"
Gallons Per Day	3,000	10,000	8,000
Linear Feet of Filtration	122	525	625
SmartFilter Switch and Alarm	Available	Available	Available
Automatic Shut-off Ball for Cleaning	X	X	X
Filtration Slot Technology	X	Х	X
Extend & Lok Compatible	X	Х	X
NSF Certification	X	X	X
Installed in Multiples for Larger Flows	Х	X	X
Gas Deflector	X	X	X
APPLICATIONS			
Residential	X	Х	
Residential Multi-Family	X	X	X
Commercial	X	X	X
Grease Traps			X
BENEFITS			
Extend Life of Leaching Fields	X	Х	X
Keeps Solids in Septic Tank	Х	Х	Х
Reduction of TSS & CBOD5	X	Х	Х
ZABEL COMPARABLE FILTERS	A100	A100	A300



PL-122 Filter

The PL-122 was the original Polylok filter. It was the first filter on the market with an automatic shut-off ball installed with every filter. When the filter is removed for regular servicing, the ball will float up and prevent any solids from leaving the tank. Our patented design cannot be duplicated.

Features:

- Offers 122 linear feet of 1/16" filter slots, which significantly extends time between cleaning.
- Has a flow control ball that shuts off the flow of effluent when the filter is removed for cleaning.
- Has its own gas deflector ball which deflects solids away.
- Installs easily in new tanks, or retrofits in existing systems.
- Comes complete with its own housing. No gluing of tees or pipe, no extra parts to buy.
- Has a modular design, allowing for increased filtration.

PL-122 Installation:

Ideal for residential waste flows up to 3,000 gallons per day (GPD). Easily installs in any new or existing 4" outlet tee.

- 1. Locate the outlet of the septic tank.
- 2. Remove the tank cover and pump tank if necessary.
- 3. Glue the filter housing to the outlet pipe, or use a Polylok Extend & Lok if not enough pipe exists.
- 4. Insert the PL-122 filter into tee.
- 5. Replace and secure the septic tank cover.

PL-122 Maintenance:

The PL-122 Effluent Filter will operate efficiently for several years under normal conditions before requiring cleaning. It is recommended that the filter be cleaned every time the tank is pumped, or at least every three years.

- 1. Do not use plumbing when filter is removed.
- 2. Pull PL-122 cartridge out of the tee.
- 3. Hose off filter over the septic tank. Make sure all solids fall back into septic tank.
- 4. Insert filter back into tee/housing.



Polylok offers the only filter on the market where you can get more GPD by simply snapping our filters together!

Patent Numbers 6,015,488 & 5,871,640



Connects to Septic Tank Wall

the SmartFilter® switch and alarm.



PL-525 Filter

The PL-525 Filter is rated for 10,000 GPD (gallons per day) making it one of the largest filters in its class. It has 525 linear feet of 1/16" filtration slots. Like the Polylok PL-122, the Polylok PL-525 has an automatic shut-off ball installed with every filter. When the filter is removed for cleaning, the ball will float up and temporarily shut off the system so the effluent won't leave the tank.

Features:

- Rated for 10,000 GPD (gallons per day).
- 525 linear feet of 1/16" filtration.
- Accepts 4" and 6" SCHD 40 pipe.
- Built in gas deflector.
- Automatic shut-off ball when filter is removed.
- Alarm accessibility.
- Accepts PVC extension handle.

PL-525 Installation:


Ideal for residential and commercial waste flows up to 10,000 gallons per day (GPD).

- 1. Locate the outlet of the septic tank.
- 2. Remove the tank cover and pump tank if necessary.
- 3. Glue the filter housing to the 4" or 6" outlet pipe. If the filter is not centered under the access opening use a Polylok Extend & Lok or piece of pipe to center filter.
- 4. Insert the PL-525 filter into its housing.
- 5. Replace and secure the septic tank cover.

PL-525 Maintenance:

The PL-525 Effluent Filters will operate efficiently for several years under normal conditions before requiring cleaning. It is recommended that the filter be cleaned every time the tank is pumped, or at least every three years. If the installed filter contains an optional alarm, the owner will be notified by an alarm when the filter needs servicing. Servicing should be done by a certified septic tank pumper or installer.

- 1. Locate the outlet of the septic tank.
- 2. Remove tank cover and pump tank if necessary.
- 3. Do not use plumbing when filter is removed.
- 4. Pull PL-525 cartridge out of the housing.
- 5. Hose off filter over the septic tank. Make sure all solids fall back into septic tank.
- Insert the filter cartridge back into the housing making sure the filter is properly aligned and completely inserted.
- 7. Replace and secure septic tank cover.

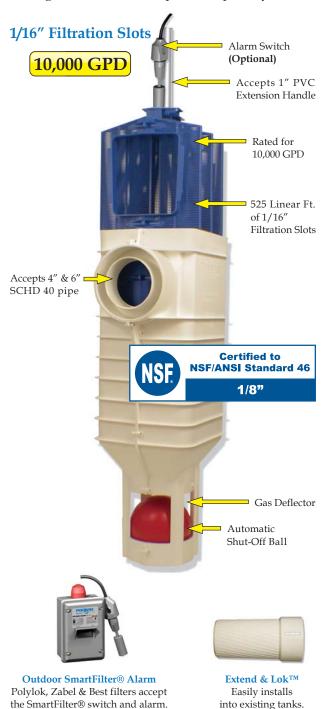



PL-625 Filter

The PL-625 filter is ideal for grease trap applications. The 1/32'' filtration has been shown to reduce fats, oils, and grease (FOG) by as much as 60% to 98%! The filter may be used in onsite wastewater systems that require a finer level of TSS removal. Whatever the application, Polylok has the filter for you!

Features:

- Rated for 8,000 GPD (gallons per day).
- 625 linear feet of 1/32" filtration.
- · Accepts 4" and 6" SCHD 40 pipe.
- · Built in gas deflector.
- Automatic shut-off ball when filter is removed.
- Alarm accessibility.
- · Accepts PVC extension handle.

PL-625 Installation:

Ideal for residential and commercial waste flows up to 8,000 gallons per day (GPD).

- 1. Locate the outlet of the septic tank.
- 2. Remove the tank cover and pump tank if necessary.
- 3. Glue the filter housing to the 4" or 6" outlet pipe. If the filter is not centered under the access opening use a Polylok Extend & Lok or piece of pipe to center filter.
- 4. Insert the PL-625 filter into its housing.
- 5. Replace and secure the septic tank cover.

PL-625 Maintenance:

The PL-625 Effluent Filters will operate efficiently for several years under normal conditions before requiring cleaning. It is recommended that the filter be cleaned every time the tank is pumped, or at least every three years. If the installed filter contains an optional alarm, the owner will be notified by an alarm when the filter needs servicing. Servicing should be done by a certified septic tank pumper or installer.

- 1. Locate the outlet of the septic tank.
- 2. Remove tank cover and pump tank if necessary.
- 3. Do not use plumbing when filter is removed.
- 4. Pull PL-625 cartridge out of the housing.
- Hose off filter over the septic tank. Make sure all solids fall back into septic tank.
- Insert the filter cartridge back into the housing making sure the filter is properly aligned and completely inserted.
- 7. Replace and secure septic tank cover.

